
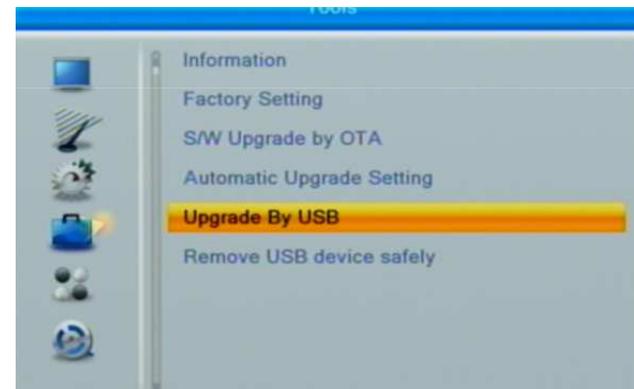


SW UPGRADE BY USB

- 1 Download the latest SW , SAVE to USB
- 2 Plug the USB to STB USB port and turn ON the STB
- 3 Press  button on the Remote Control unit
go to **TOOLS** – select **Upgrade By USB** – press “OK”
- 4 Select Upgrade – AllCode – select **OK** – select **Yes**
- 5 Wait – after STB reboot – select **Antenna Power ON**
- select “OK”
- 6 On Aerial Adjustment Folder - check the **Signal Intensity**
and **Signal Quality**, adjust antenna for best signal (50% -98%)
then press **OK**

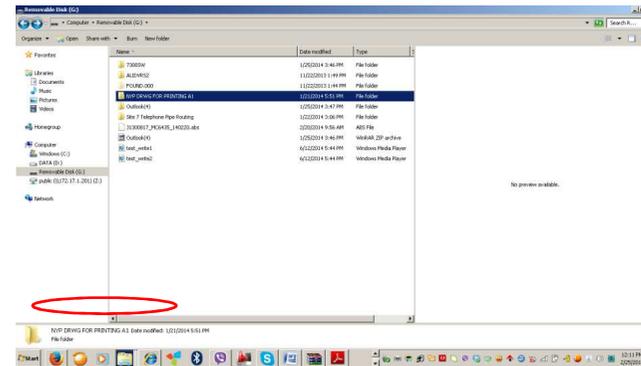

SW UPGRADE BY USB

SCREEN SHOTS

